

OIL PAN AND OIL STRAINER


PF1:11110

ABS0095Y

OIL PAN AND OIL STRAINER

Removal and Installation (2WD Model)

SEC. 110•150•213•253

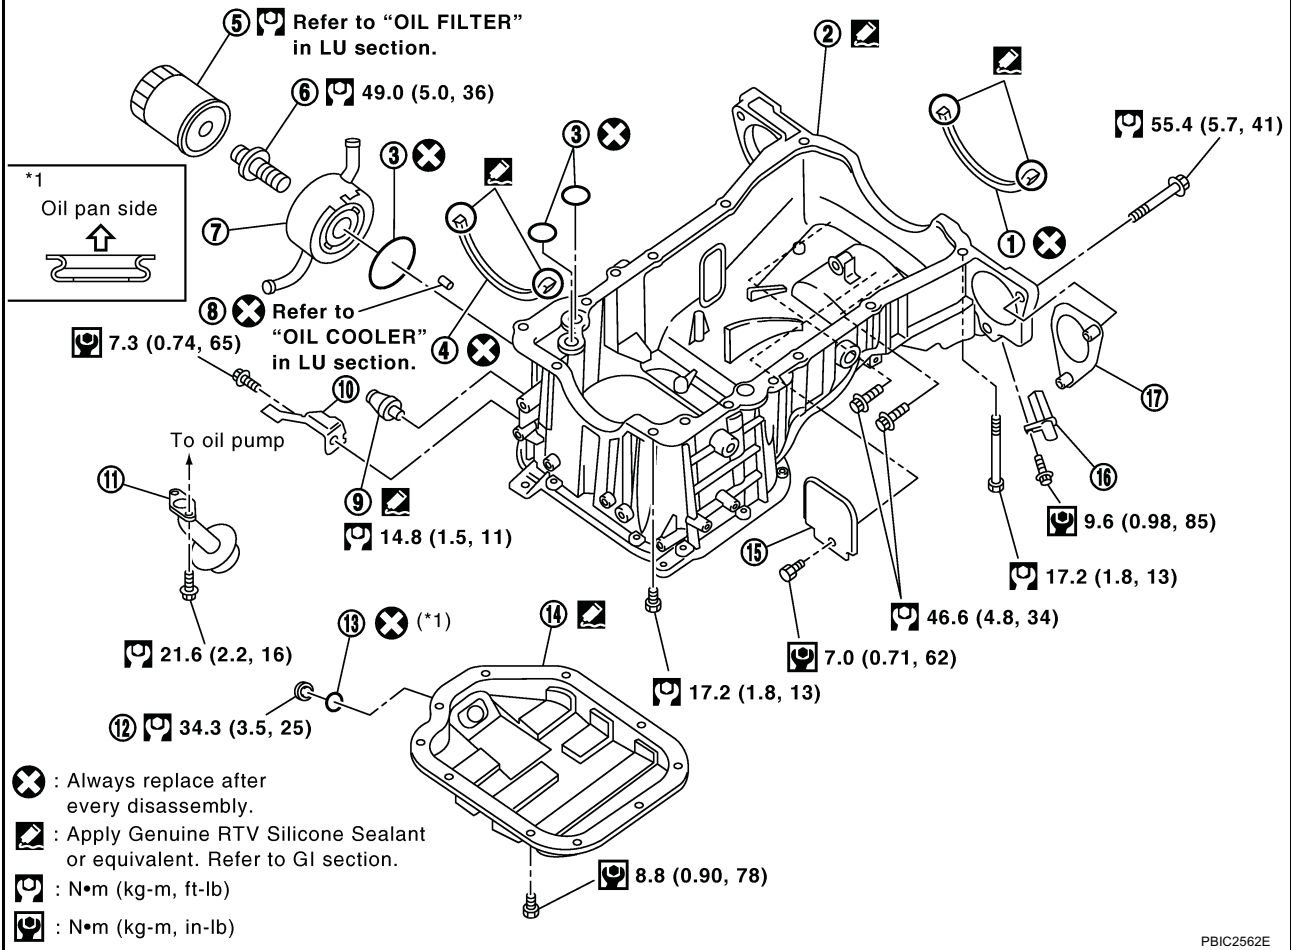

PBIC2562E

- | | | |
|--------------------------------------|----------------------|------------------------|
| 1. Oil pan gasket (rear) | 2. Oil pan (upper) | 3. O-ring |
| 4. Oil pan gasket (front) | 5. Oil filter | 6. Connector bolt |
| 7. Oil cooler | 8. Relief valve | 9. Oil pressure switch |
| 10. Bracket | 11. Oil strainer | 12. Drain plug |
| 13. Drain plug washer | 14. Oil pan (lower) | 15. Rear plate |
| 16. Crankshaft position sensor (POS) | 17. Rear cover plate | |

REMOVAL

WARNING:

To avoid the danger of being scalded, do not drain the engine oil when the engine is hot.

NOTE:

To remove oil pan (lower) only, take step 4 and step 5, then step 18. Step 1 to 3 and 6 to 17 are unnecessary.

- Remove hood assembly. Refer to [BL-12, "HOOD"](#).
- Remove engine cover with power tool. Refer to [EM-19, "INTAKE MANIFOLD COLLECTOR"](#).
- Remove air duct. Refer to [EM-17, "AIR CLEANER AND AIR DUCT"](#).
- Remove engine undercover with power tool.
- Drain engine oil. Refer to [LU-9, "Changing Engine Oil"](#).
- Drain engine coolant. Refer to [CO-10, "Changing Engine Coolant"](#).

CAUTION:

- Perform this step when engine is cold.
- Do not spill engine coolant on drive belts.