

FLOOR SIDE FAIRING


FLOOR SIDE FAIRING

PF:74586

Removal and Installation

AIS004S6

1. Remove bolt, nut and screws of floor side fairing.
2. Remove floor fairing.

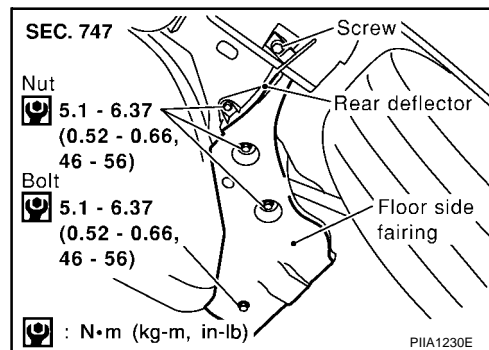

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
EI
J
K
L
M

EI