

BCM (BODY CONTROL MODULE)

SYSTEMS CONTROLLED BY BCM DIRECTLY

System	Reference
Power door lock	BL-19. "POWER DOOR LOCK SYSTEM"
Remote keyless entry	BL-51. "REMOTE KEYLESS ENTRY SYSTEM"
Power window ^{NOTE}	GW-17. "POWER WINDOW SYSTEM"
Front power seat ^{NOTE}	SE-53. "POWER SEAT"
Sunroof ^{NOTE}	RF-10. "SUNROOF"
Room lamp timer	LT-164. "INTERIOR ROOM LAMP"

NOTE:

Power supply only. No system control.

SYSTEMS CONTROLLED BY BCM AND IPDM E/R

System	Reference
Panic alarm	BL-51. "REMOTE KEYLESS ENTRY SYSTEM"
Theft warning	BL-106. "VEHICLE SECURITY (THEFT WARNING) SYSTEM"
IVIS (NATS)	BL-135. "IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)"
Headlamp, tail lamp, auto light system, Battery saver control	<ul style="list-style-type: none"> ● LT-7. "HEADLAMP (FOR USA)" ● LT-38. "HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -"
Fog lamp	LT-89. "FRONT FOG LAMP"
Front wiper	WW-4. "FRONT WIPER AND WASHER SYSTEM"
Rear window defogger	GW-96. "REAR WINDOW DEFOGGER"

SYSTEMS CONTROLLED BY BCM AND COMBINATION METER

System	Reference
Warning chime	DI-36. "WARNING CHIME"
Turn signal and hazard warning lamps	LT-107. "TURN SIGNAL AND HAZARD WARNING LAMPS"
Low tire pressure warning system	WT-7. "LOW TIRE PRESSURE WARNING SYSTEM"

A

B

C

D

E

F

G

H

I

J

BCS

L

M