

STEP LAMP

STEP LAMP

PFP:26420

Bulb Replacement

AKS000M5

1. Remove step lamp. Refer to [LT-134, "Removal and Installation"](#).
2. Remove bulb.


Step lamp : 12V - 5W

Removal and Installation

AKS000M6

REMOVAL

1. Undo clips on lower part of front door finisher and lift finisher up.
2. Disconnect step lamp connector.
3. Press pawl on reverse side and remove the step lamp.

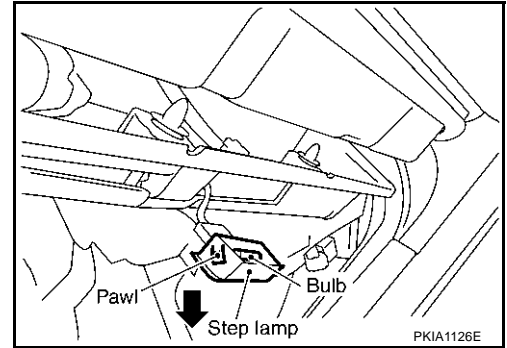

INSTALLATION

Install in the reverse order of removal.