


16. Fixing rear under protector ① to the rear bumper

<1>

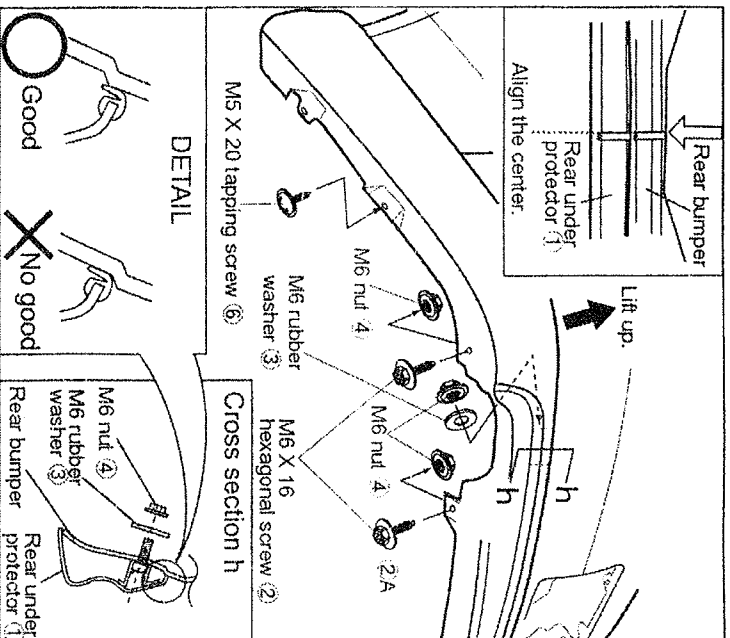

- (1) Install rear under protector ① into the rear bumper by inserting the bolt of retainer of rear under protector ① into the holes made in the procedure 8.-(1).
- (2) Align the center of rear under protector ① to the rear bumper as illustrated.
- (3) Fix the retainer part of rear under protector ① to the rear bumper with rubber washer ③ and M6 nut ④ as illustrated. (1 position)


△Caution

Lifting the corner of rear under protector ① up, install the protector onto the stagger of rear bumper.

- (4) Fix the lower part of rear under protector ① to the rear bumper with M6 X 16 hexagonal screw ② and M6 nut ④ as illustrated. (2 positions) Fix the position ②A close to vehicle center first. Tighten while pushing the protector up and forward.
- (5) Fix the lower side of rear under protector ① to side of rear bumper with M5 X 20 tapping screw ⑥ as illustrated. (1 position) Tighten while pushing the protector up and forward.

17. Preventing the rear bumper from being scratched


※Apply gum tape on the shaded part.

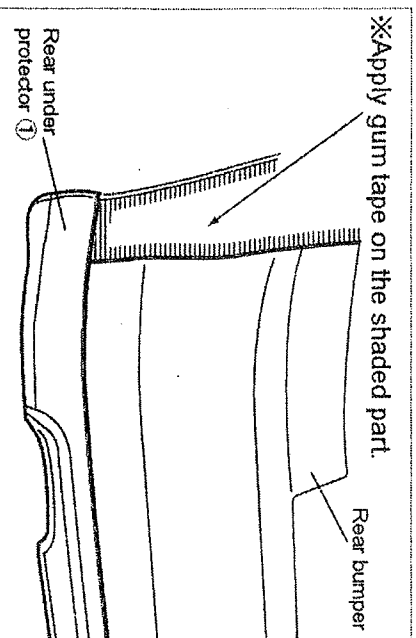

- (1) Apply gum tape to the rear bumper as illustrated for preventing the rear bumper from being scratched.

18. Fixing rear under protector ① to the rear bumper

<2>

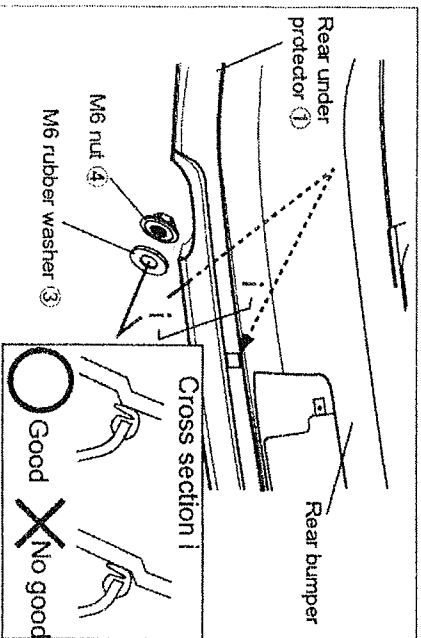

- (1) Using 2 people, remove the rear bumper and rear under protector ① from the vehicle.

△Caution

Be careful not to damage the vehicle while removing the rear bumper and rear under protector ①. Protect the removed rear bumper from scratch.

- (2) Fix the rear under protector ① to rear part of the rear bumper with M5 rubber washer ③ and M6 nut ④ as illustrated. (1 position)

△Caution

Install rear bumper protector ① above the stagger line of rear bumper. See cross section I.

- (3) Tighten up all fasteners.