
## [10] Reinstalling the rear combination lamp and rear diffuser

- 1. Reinstalling the rear combination lamps
- (1)Following the vehicle service manual, reinstall the rear combination lamps.
- 2. Reinstalling the rear diffuser
- (2)Following the vehicle service manual, reinstall the rear diffuser

## [11] Manufacturing Lot Number Display


Package Lot Number

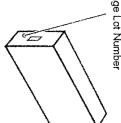



## [12] How to remove rear under protector ①

- It is impossible to remove the rear under protector only.
- When removing the rear under protector, obtain the vehicle clip (62828-4P000).

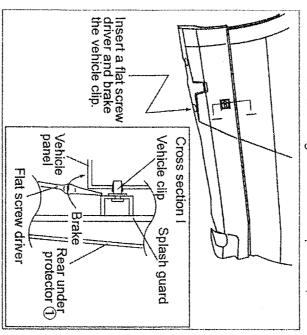

- (1) Insert a flat screw driver between the vehicle panel and splash guard through the hole of rear splash guard. Turn the screw driver to brake the vehicle clip.
- (2) Remove the rear under protector in the reverse order of installing.