


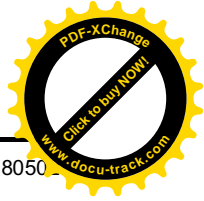

DOOR LOCK




DOOR LOCK

PF8:8050

Component Structure

AIS0017C

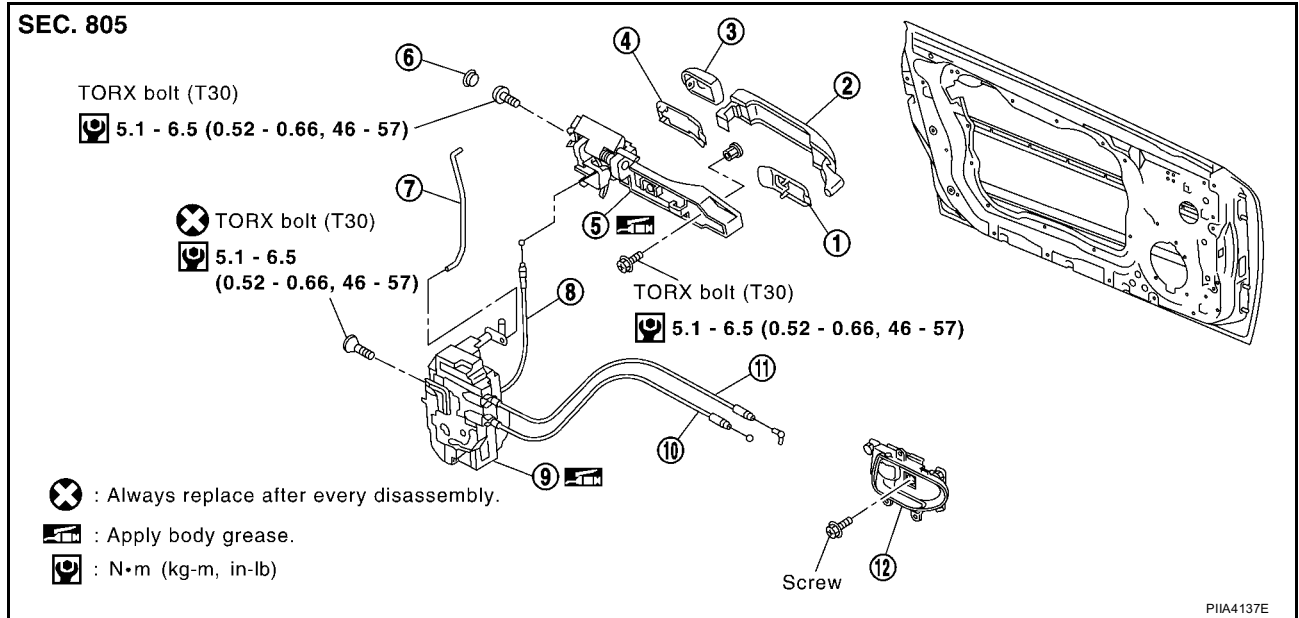


- | | | |
|--|---------------------------|--|
| 1. Front gasket | 2. Outside handle | 3. Door key cylinder (Driver side)
Outside handle escutcheon (passenger side) |
| 4. Rear gasket | 5. Outside handle bracket | 6. grommet |
| 7. Key cylinder rod (Driver side only) | 8. Outside handle cable | 9. Door lock assembly |
| 10. Inside handle knob cable | 11. Lock knob cable | 12. Inside handle |

Removal and Installation


AIS0017E

REMOVAL


1. Remove the front door finisher. Refer to [EI-30, "Removal and Installation"](#).
2. Remove the front door window and front door module assembly. Refer to [GW-54, "Removal and Installation"](#).
3. Disconnect the inside handle cable and lock knob cable from the back side of the front door finisher.

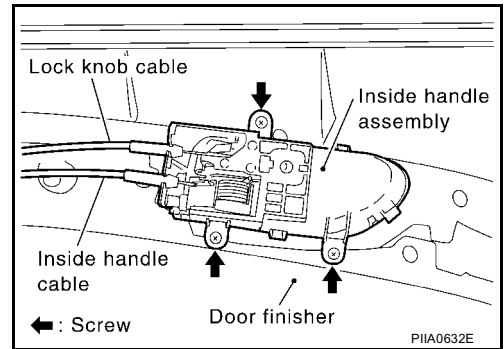


4. Remove door side grommet, and remove door key cylinder assembly (driver side) or outside handle escutcheon (passenger side) bolts (TORX T30) from grommet hole.

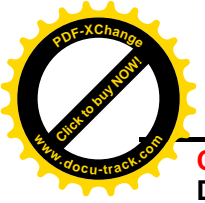


DOOR LOCK

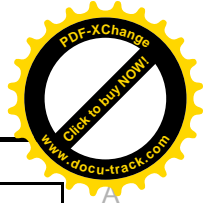


CAUTION:
Do not forcibly remove the TORX bolts (T30).

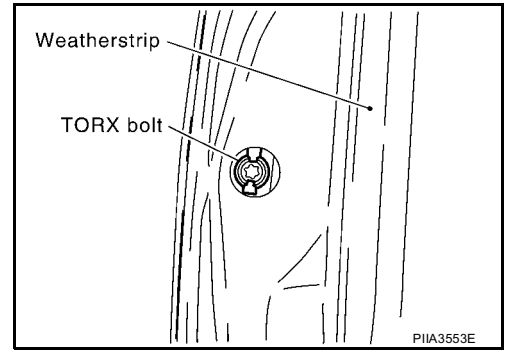


- 5. Reach to separate the key cylinder rod connection (on the handle). If no door key cylinder is found, GO TO 6.
- 6. While pulling the outside handle, remove door key cylinder assembly (driver side) or outside handle escutcheon (passenger side).

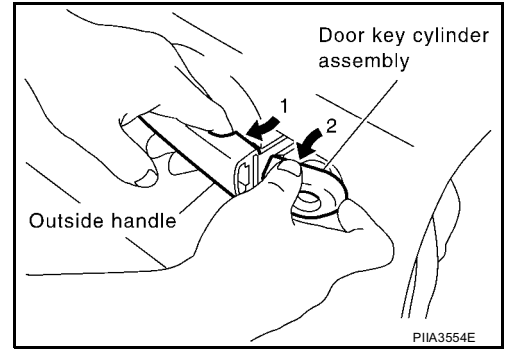


- 7. While pulling outside handle, slide toward rear of vehicle to remove outside handle.

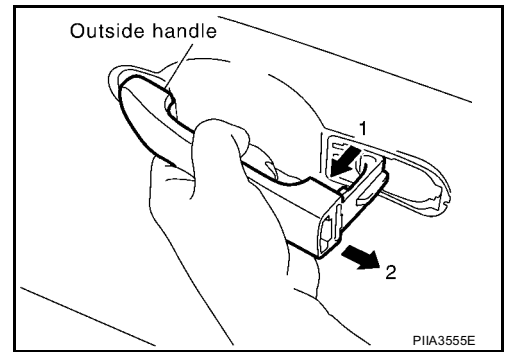


- 8. Remove the front gasket and rear gasket.

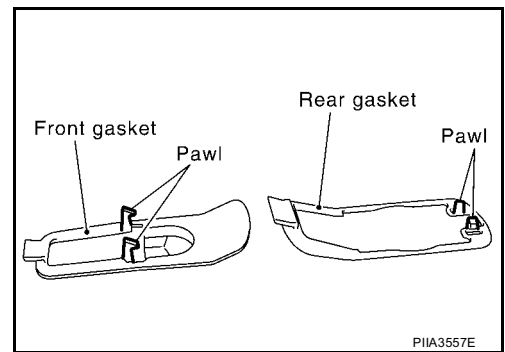


A
B
C
D
E
F
G
H
BL
J
K
L
M

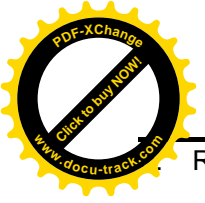


DOOR LOCK

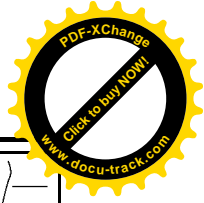


Remove the TORX bolts (T30), remove the door lock assembly.

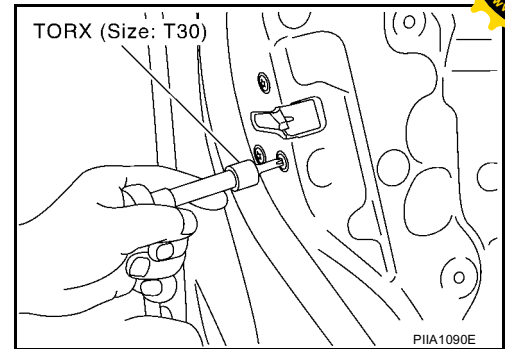

10. Remove the TORX bolt (T30) of the outside handle bracket.

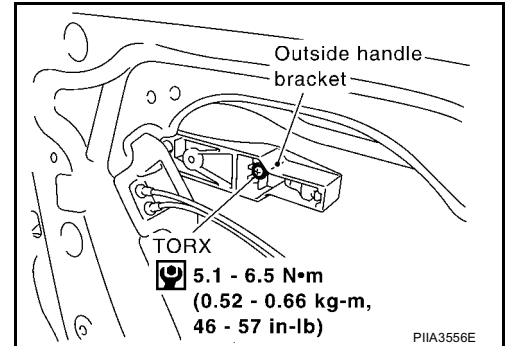


11. While pulling outside handle bracket, slide toward rear of vehicle to remove outside handle bracket and door lock assembly.

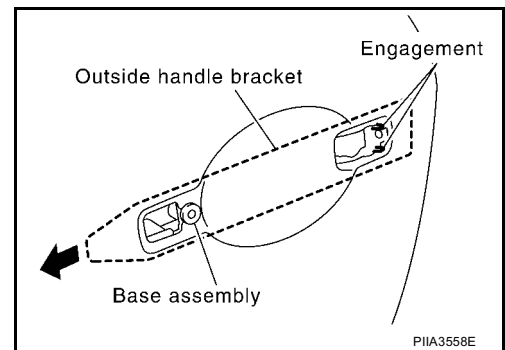

12. Disconnect the door lock actuator connector.

13. Reach to separate the key cylinder rod and outside handle cable connection.

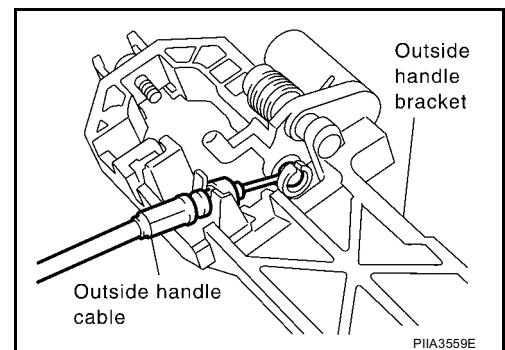

INSTALLATION


Install in the reverse order of removal.

CAUTION:

To install each rod, be sure to rotate the rod holder until a click is felt.




DOOR LOCK

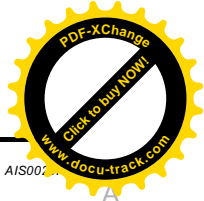

AIS002

Disassembly and Assembly DOOR KEY CYLINDER ASSEMBLY

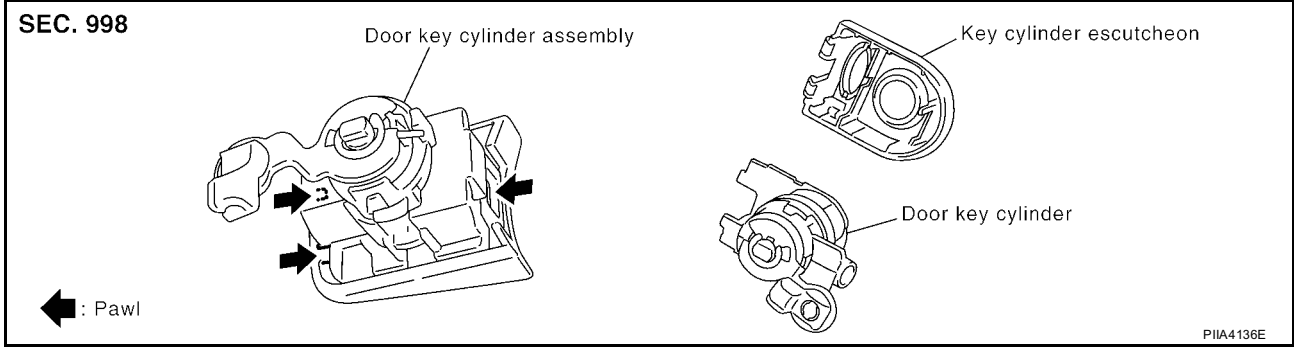

Remove the key cylinder escutcheon pawl and remove the door key cylinder.

- A
- B
- C
- D
- E
- F
- G
- H
- BL**
- J
- K
- L
- M