

EXHAUST SYSTEM

< ON-VEHICLE REPAIR >


ON-VEHICLE REPAIR

EXHAUST SYSTEM

Exploded View

INFOID:000000000956382

EX

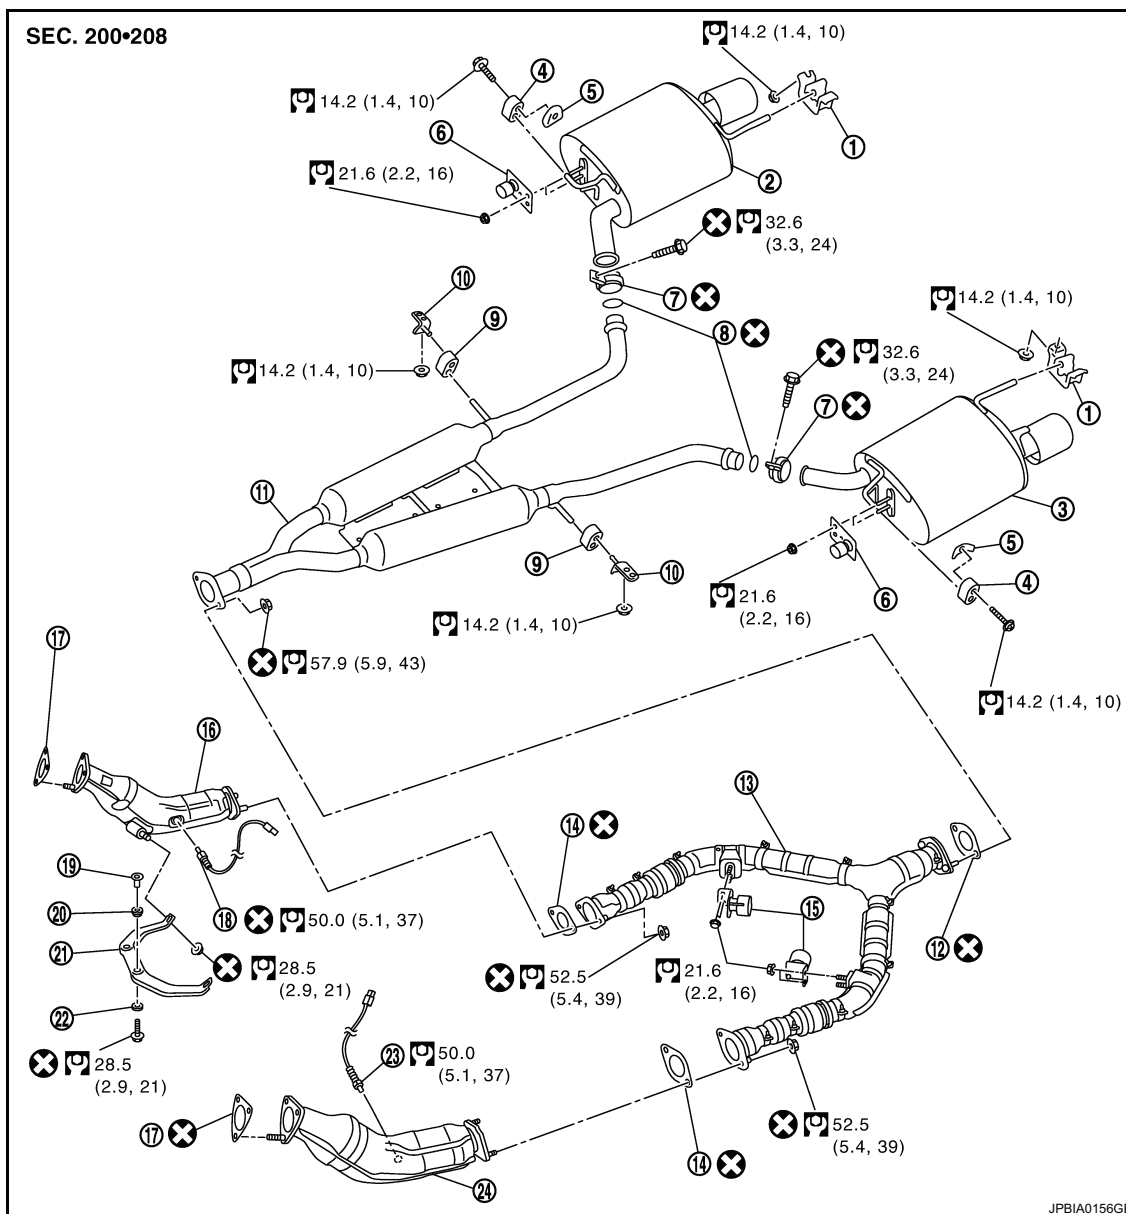

- | | | |
|-------------------------------------|-------------------------------------|-------------------------------------|
| 1. Mounting rubber | 2. Main muffler (RH) | 3. Main muffler (LH) |
| 4. Mounting rubber | 5. Collar | 6. Dynamic damper |
| 7. Clamp | 8. Gasket | 9. Mounting rubber |
| 10. Mounting bracket | 11. Center muffler | 12. Gasket |
| 13. Exhaust front tube | 14. Gasket | 15. Dynamic damper |
| 16. Three way catalyst (right bank) | 17. Gasket | 18. Heated oxygen sensor 2 (bank 1) |
| 19. Collar | 20. Grommet | 21. Exhaust mounting bracket |
| 22. Grommet | 23. Heated oxygen sensor 2 (bank 2) | 24. Three way catalyst (left bank) |

Refer to [GI-4. "Components"](#) for symbol marks in the figure.

Removal and Installation

INFOID:000000000956383