



# SATELLITE RADIO INSTALLATION INSTRUCTIONS

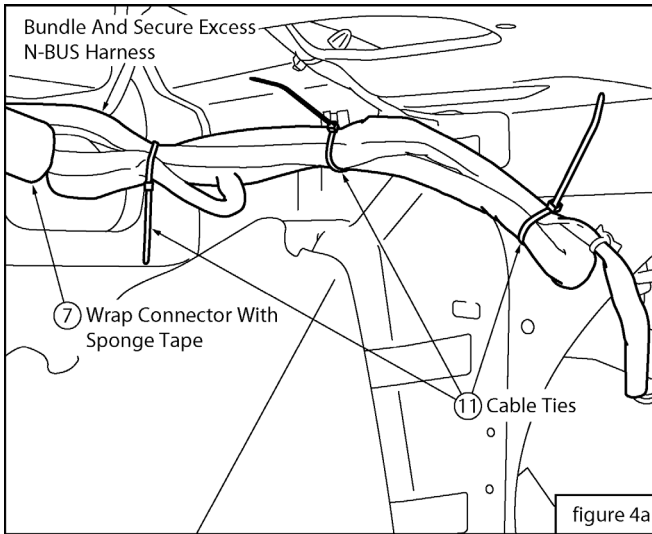

- 4) Connect the N-Bus harness extender to the pre-wired vehicle N-Bus harness connector.
- 5) Leaving enough extra harness to reach the tuner, wrap the excess N-BUS harness extender back onto the N-BUS harness and secure with three cable ties as shown (figure 4a).
  - a) Trim off the excess cable ties as flush as possible with the cable tie head.

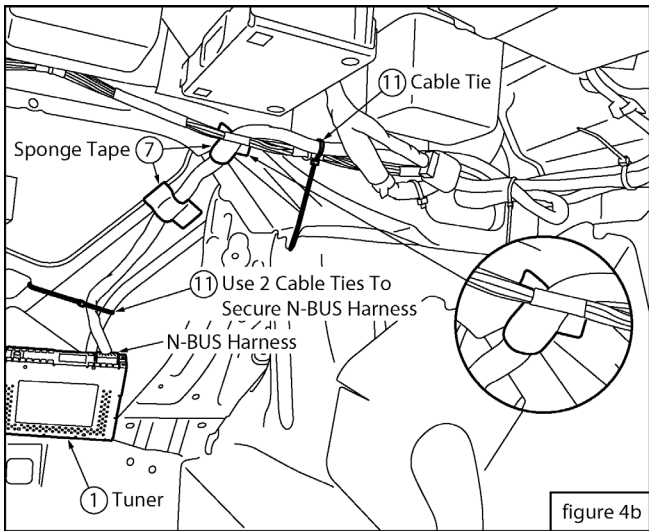

- 6) Continue working towards the tuner and route the N-BUS harness over and behind the existing harness as shown (figure 4b).
  - a) Secure the N-BUS harness to the existing harness with a cable tie as shown (figure 4b).
  - b) Continue to secure the N-BUS harness to the trunk panel with two sponge tape as shown (figure 4b).
  - c) Attach two cable ties together and secure the remaining length of N-BUS harness to the trunk panel as shown (figure 4b).
  - d) Trim off the excess cable ties as flush as possible with the cable tie head.
  - e) Attach the N-BUS connector to the tuner.