
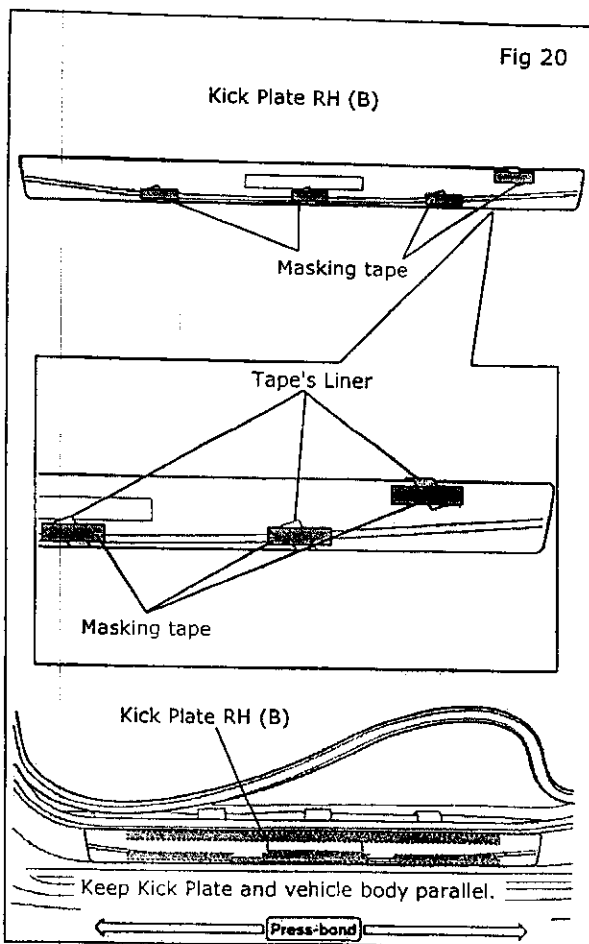


# INSTALLATION INSTRUCTIONS - Illuminated Kick Plate

## 12. FRONT KICK PLATE INSTALLATION

The procedure below shows the installation for RH side. Repeat procedure for LH side.

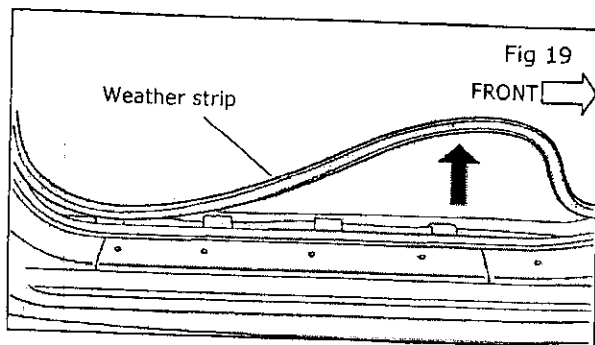

- 1) Remove the vehicle weather strip near the kick plate (B) attachment location shown in Fig 19.
- 2) Clean the attachment area of kick plate (B) with soapy water.
- 3) Dry area with soft non linting towel.
- 4) Clean area with 50/50 alcohol & water solution and let dry for 30 seconds.
- 5) Pull the double-sided tape liner pull tab to partially remove liner. Using masking tape, hold the liner to the visible side of the kick plate (B) surface as shown in Fig 20.
- 6) Align clips on part to first and fourth hole on vehicle from front side.
- 7) Set part on vehicle, being careful to keep the outside edge of the part parallel to the rocker panel.
- 8) Gradually remove the tape liner at the back of the kick plate (B) starting from the front, apply minimum 11lb(49N) of pressure along the part to attach tape to body shown in Fig 20.


### CAUTION

- Use caution when applying pressure as the surface may dent.
- During installation, be careful not to allow the harness to get stuck between the vehicle and the kick plate.
- Harness should be routed through the notched area of the kick plate.


## INSTALLATION INSTRUCTIONS - Illuminated Kick Plate

### 13. HARNESS CONNECTION INSTALLATION

The procedure below shows the installation for RH side.  
Repeat procedure for LH side.

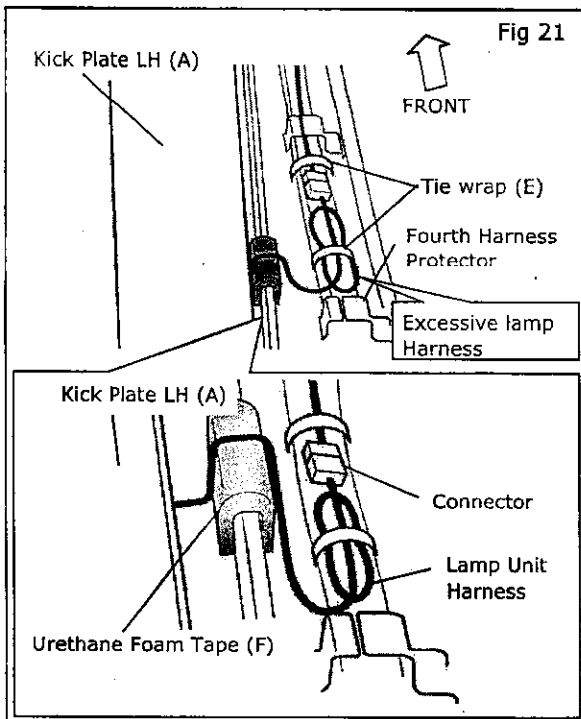

- 1) Fold one piece urethane foam tape (F) and cut into two equal pieces.
- 2) Clean both sides of the attachment area for the urethane foam tape (F) with the 50/50 alcohol & water solution. Let dry for 30 seconds. Shown in Fig 21.

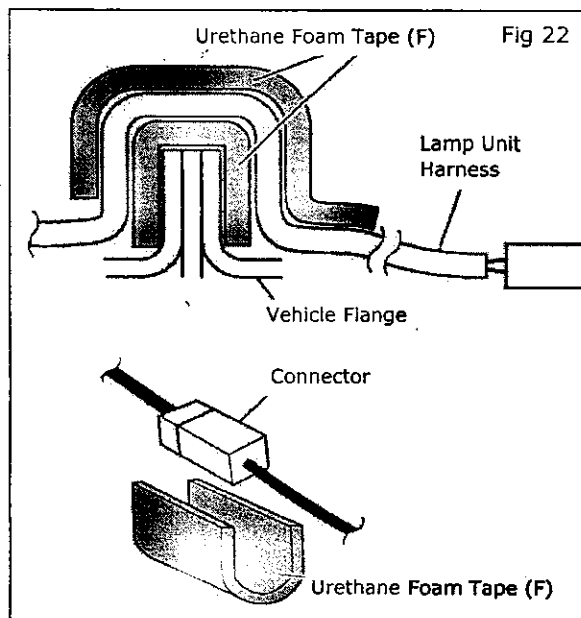

- 3) Attach the cut piece of urethane foam tape (F) to vehicle flange shown in Fig 22.
- 4) Place the lamp harness on top of the urethane foam tape (F), then apply second half of the urethane foam tape (F) on top of the harness.
- 5) Connect the connectors and apply the urethane foam tape (F) on the connecting section shown in Fig 22.
- 6) Attach excessive lamp harness to the vehicle harness with a tie wrap (E) shown in Fig 21.
- 7) Cut excessive tie wrap.



### CAUTION

Do not attach the harness to sharp metal edge.

# INSTALLATION INSTRUCTIONS - Illuminated Kick Plate

## 14. REAR KICK PLATE INSTALLATION

The procedure below shows the installation for RH side. Repeat procedure for LH side.

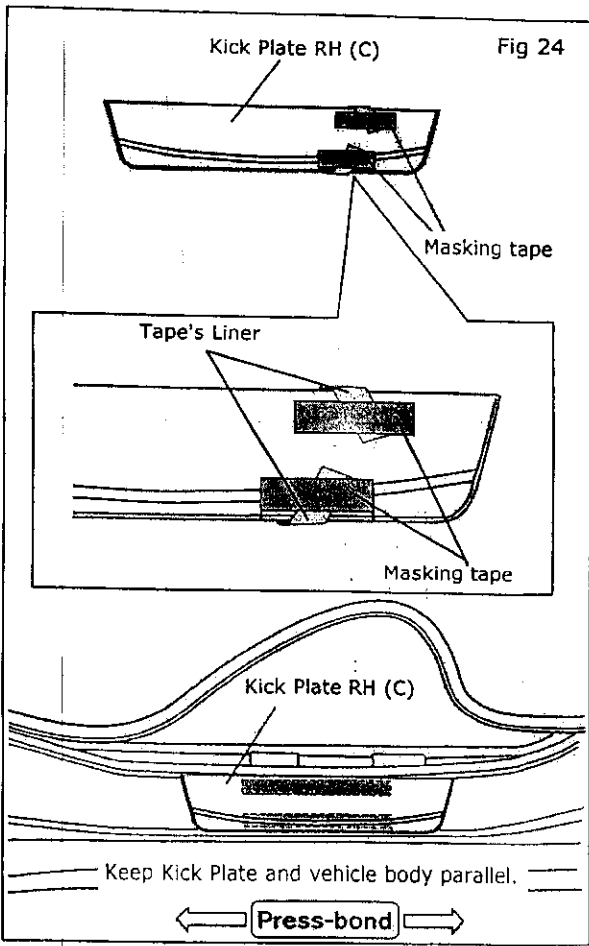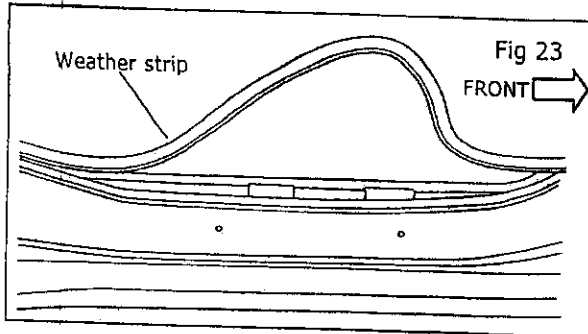

- 1) Remove the vehicle weather strip near the kick plate (C) attachment location shown in Fig 23.
- 2) Clean the attachment area of kick plate (C) with soapy water.
- 3) Dry area with soft non linting towel.
- 4) Clean area with 50/50 alcohol & water solution and let dry for 30 seconds.
- 5) Pull the double-sided tape liner pull tab to partially remove liner. Using masking tape, hold the liner to the visible side of the kick plate (C) surface as shown in Fig 24.
- 6) Align clips on part to hole on vehicle from front side.
- 7) Set part on vehicle, being careful to keep the outside edge of the part parallel to the rocker panel.
- 9) Gradually remove the tape liner at the back of the kick plate (C) starting from the front, apply minimum 11lb(49N) of pressure along the part to attach tape to body shown in Fig 24.

### CAUTION

Take caution when applying pressure as the surface may heat.

## INSTALLATION INSTRUCTIONS - Illuminated Kick Plate

### 15. CHECK AFTER INSTALLATION

1) Please check that the installation has no problem.

- a) confirm connection of connector
- b) confirm whether wire harness is fixed.

### 16. FUNCTION CHECK

- 1) Re-connect battery negative terminal.
- 2) Confirm "INFINITI" text is illuminated when either door is in the opened position.

### 17. REINSTALLATION OF REMOVED PARTS

- 1) All removed vehicle parts have been reinstalled.

#### CAUTION

- Use caution when re-installing interior components to avoid damage, scratch, or breaking of mounting clips.

- 2) Clean interior of vehicle.

### 18. VEHICLE CHECK

- 1) Remove all tools from the vehicle.
- 2) Inspect reinstalled interior trim parts for proper panel fit.
- 3) Reset radio presets to the recorded setting.
- 4) Turn ignition to ON position.
- 5) Confirm proper radio operation.
- 6) Initialize sun roof, and power window operation.
- 7) Confirm proper operation of the rear window washer fluid.
- 8) Turn ignition to off position.

#### CAUTION

- During restoring, please use caution so as not to cause the stacking of the vehicle's harness, or damage any other parts.