


ROOF SIDE MOLDING

ROOF SIDE MOLDING

PFP:73854

Removal and Installation

NIS000R9

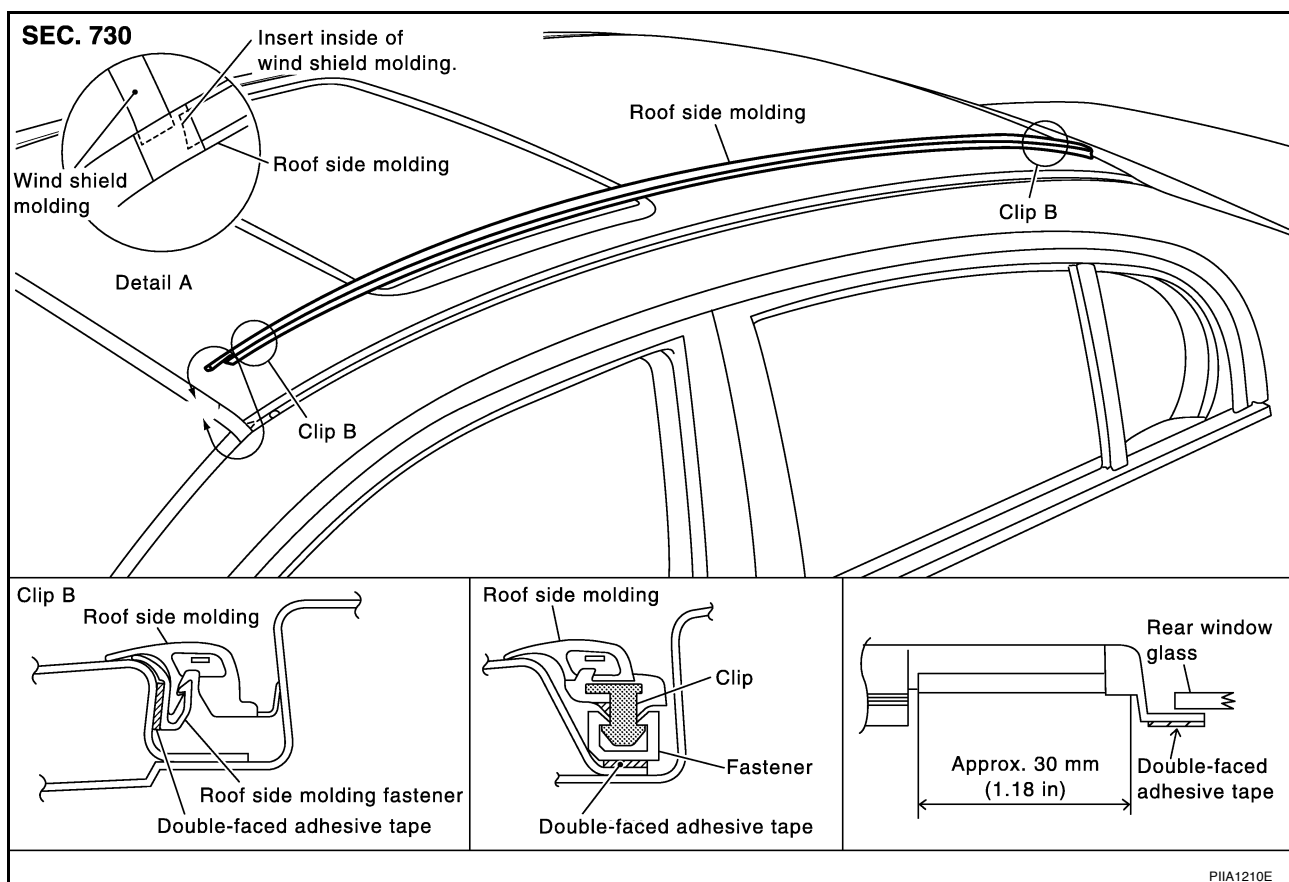

REMOVAL

Take off double-faced adhesive tape and adhesive on front edge of molding and remove it.

INSTALLATION

1. Apply double-faced adhesive tape, apply primer and adhesive on front edge of molding at standard extent.
2. Insert rear edge of molding in rear window glass, after applying double-faced adhesive tape of rear edge on panel flange.

CAUTION:

- Insert both ends (front and rear) of molding under windshield side molding.
- Use high-viscosity, slow-drying (with 5-hour or longer curing time) adhesive.
- After installation, temporarily fix it with masking tape until adhesive has completely cured.
- Do not wash vehicle unless adhesive has completely cured.

