



INFINITI

INSTALLATION INSTRUCTIONS


[1] Description: REAR UNDER PROTECTOR

[2] Application: G35 (2002~)

[3] Part Number


Part Number	Color code	Part Number	Color code
H5920-AM562	BW5	H5920-AM570	KY0
H5920-AM565	KH3	H5920-AM572	AY2
H5920-AM567	KX6	H5920-AM574	D10
H5920-AM568	QX1	H5920-AM516	B16

[4] Illustration of the Completed Installation

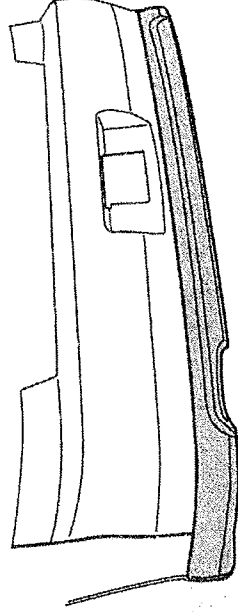

[5] Kit Contents

No.	Part Name	Quantity	No.	Part Name	Quantity
①	Rear under protector	1	⑥	M5 X 20 Tapping screw	6
②	M6 X 16 Hexagonal screw (08365-6165C)	8	⑦	M5 U-rubber washer	2
③	M6 Rubber washer (85274-4C015)	8	⑧	Cardboard template	1
④	M6 Nut	8	⑨	Paper template sheet	1
⑤	M5 J-nut (01241-00771)	6	⑩	Installation instructions	1

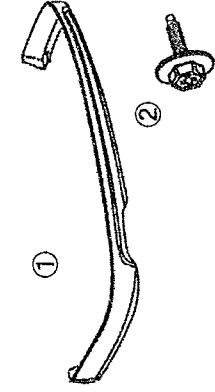

[6] Tool Required

Socket wrench (8mm, 10mm), Philips screwdriver, Electric drill, Drill bit (ϕ 3mm (or 1/8"), ϕ 8mm (or 5/16"), and ϕ 12mm (or 1/2")), Hole saw(ϕ 23mm (or 7/8")), Clip remover, Center punch, Tape measure, Philips short screw driver, Scale, Felt pen, Wrench (8mm, 10mm), Gum tape, Masking tape, Scissors

Give this installation instructions manual to the customer upon completion of the installation.